

5. GEAR CASES—Drain every 12,000 miles or annually. Drain only when hot after operation. Fill to plug levels (except transmission) before operation and after draining. Clean vents weekly and after operation in mud or water. TRANSMISSION LEVEL: Check level weekly. To check level remove cap screw located upper rear side of right hand power-take-off cover. Remove fill plug and fill to level of screw hole. When replacing cap screw discard lock washer and replace with copper or brass flat washer. (W o PTO without power-take-off; W PTO with power-take-off.)